

RECESS




RECESS

- NOTES: A. GATE NOT ORIENTED WITH RECESS OR FRAME BREAK.
- B, FLASH HEIGHT GREATER THAN 0.3 NOT ACCEPTABLE.
- C. SURFACE IMPERFECTIONS: INSPECT PARTS FROM 0.6 METERS FOR 3 SECONDS. FOUR SURFACE IMPERFECTIONS MAX PER PART. SURFACE IMPERFECTIONS NO LARGER THAN 2.3mm IN DIAMETER, HEIGHT, OR WIDTH.
- D. KNOB AND SCREW ARE SPRING LOADED OUTWARD, AS SHOWN BELOW.

TO INSTALL FASTENER:

- 1. DRILL THEN COUNTERSINK AS SHOWN BELOW.
- INSERT FASTENER AND FLARE INTO COUNTERSINK WITH INSTALLATION TOOL PART NUMBER 47-108. (SEE DRAWING J-47-108 FOR FLARE TOOL DIMENSIONS).
- 3. PUNCH CANNOT TOUCH PLASTIC DURING INSTALLATION.

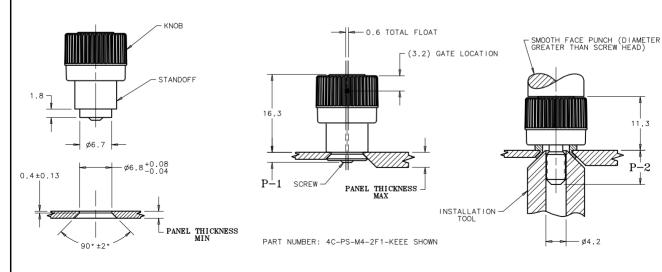

PANEL PREPARATION

UNFASTENED

FASTENED

- Ø4.2

P 2